


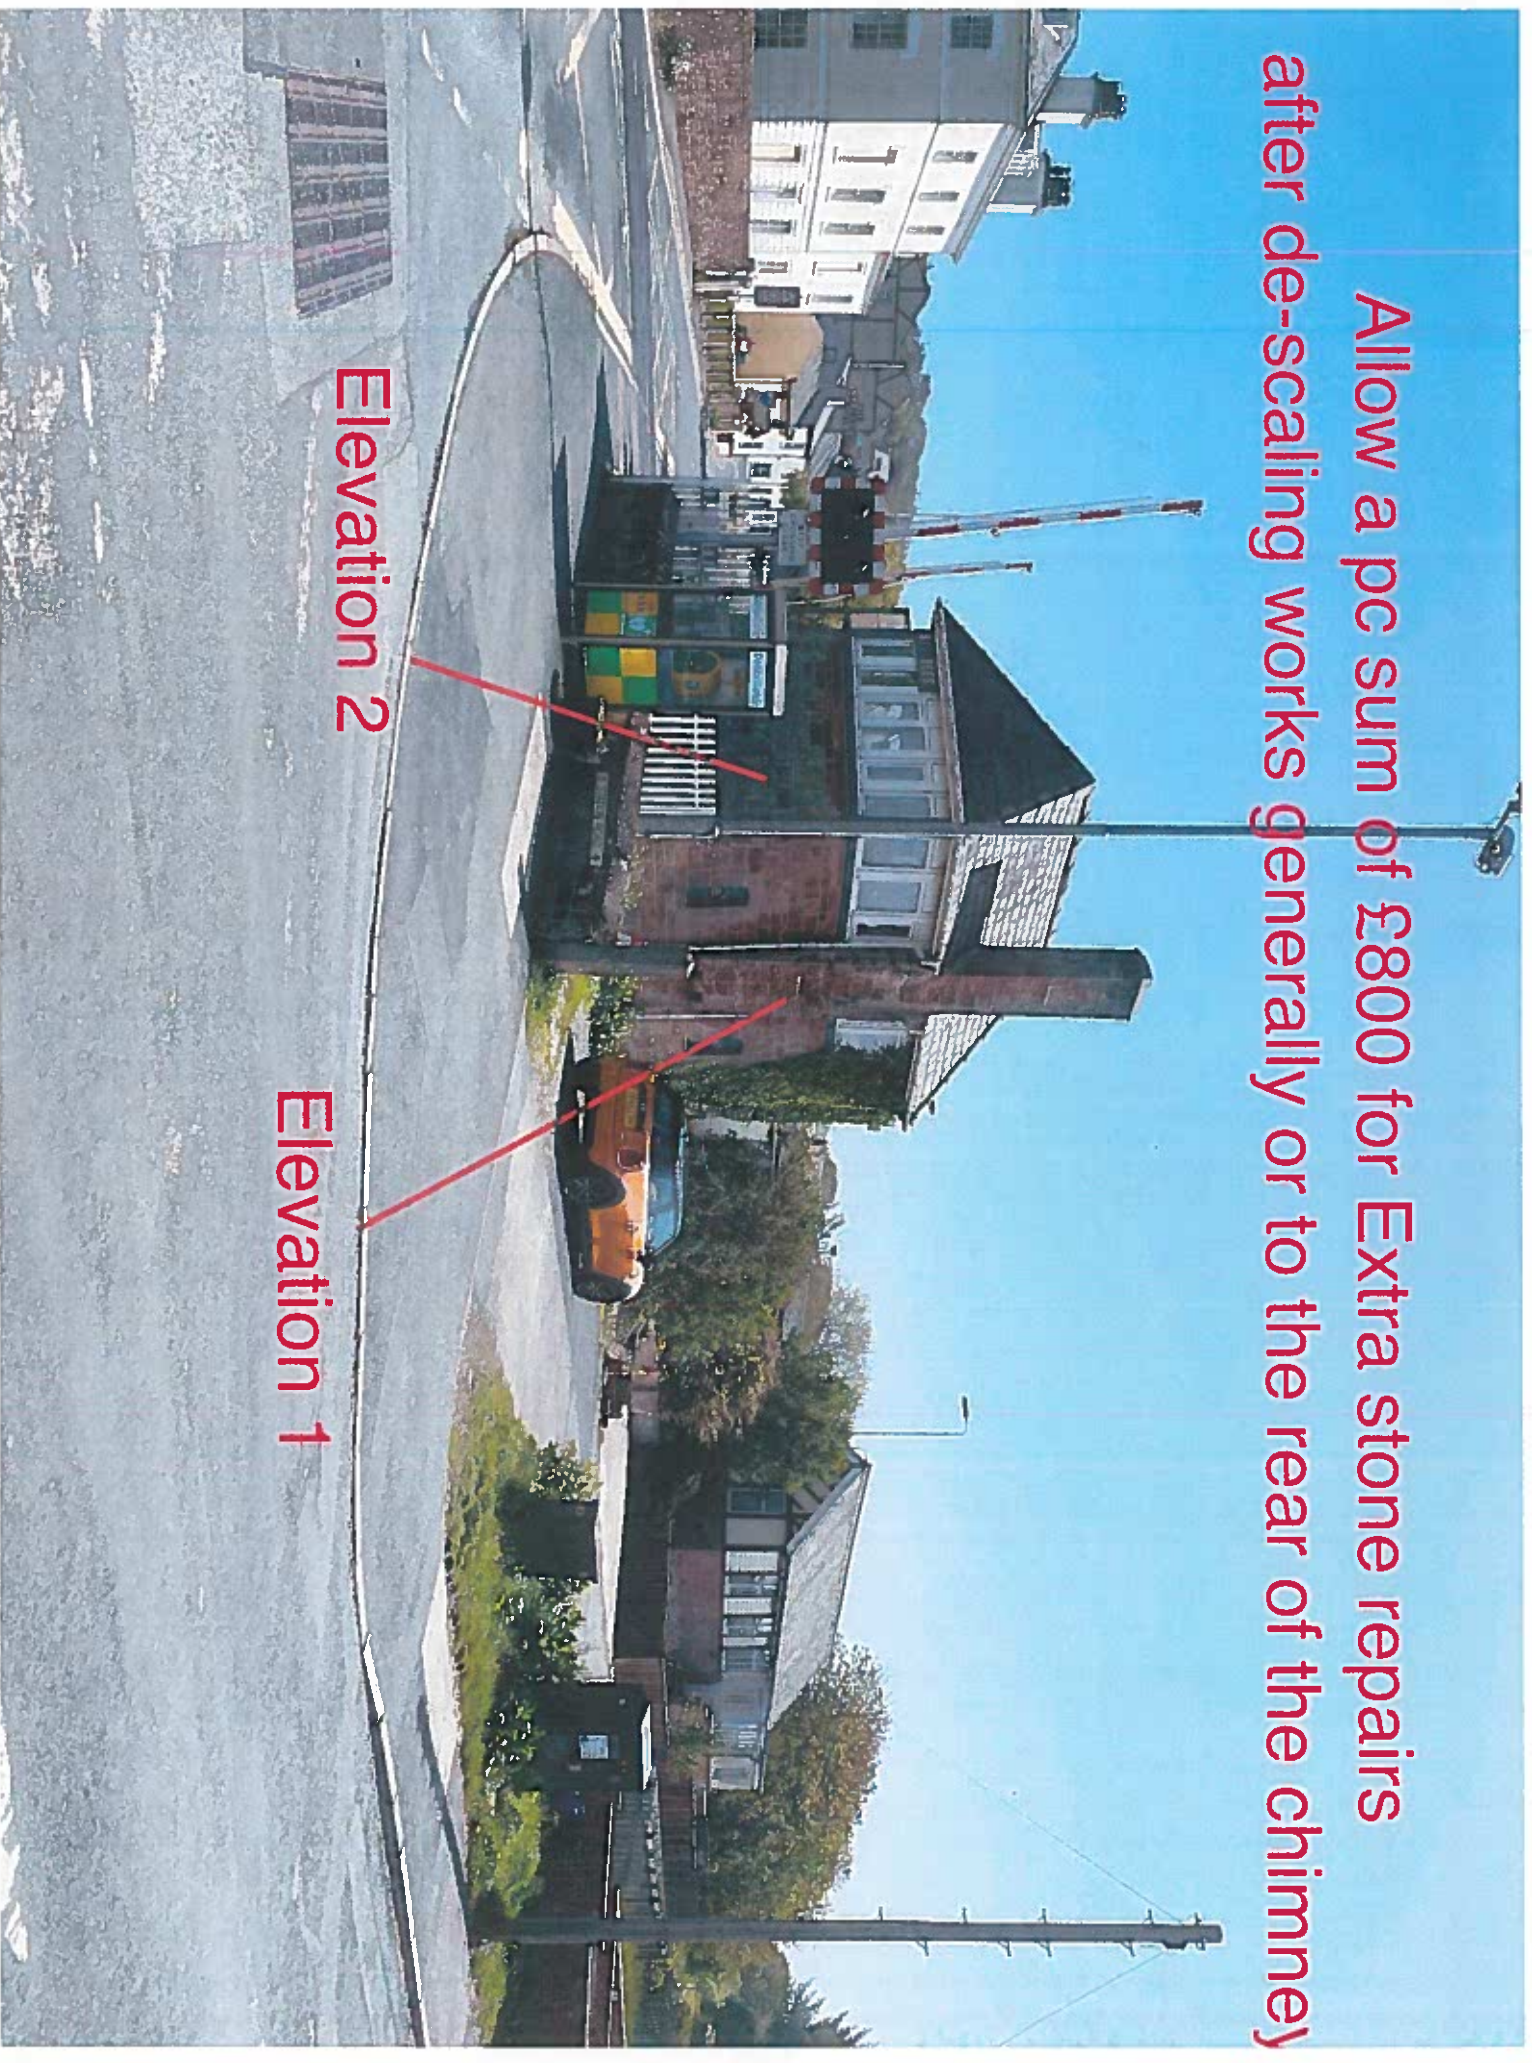

Allow a pc sum of £800 for Extra stone repairs
after de-scaling works generally or to the rear of the chimney

Elevation 2

Elevation 1



Remove plant
Growth to both sides
of Chimney and make
good window sides
in Lithomex repair
mortar

Remove Ivy to Stonework to
allow Lime Re-pointing

Replace 7 stones
isolated to match
existing

Disassemble all loose
stonework back to sound
surface everywhere




KEEP
SSING
EAR

Replace Stone cut around
pipe tooled as existing

Include for consolidating
any deep joints to building
generally before face re-pointing

Try to Re-set
3 number Archstones

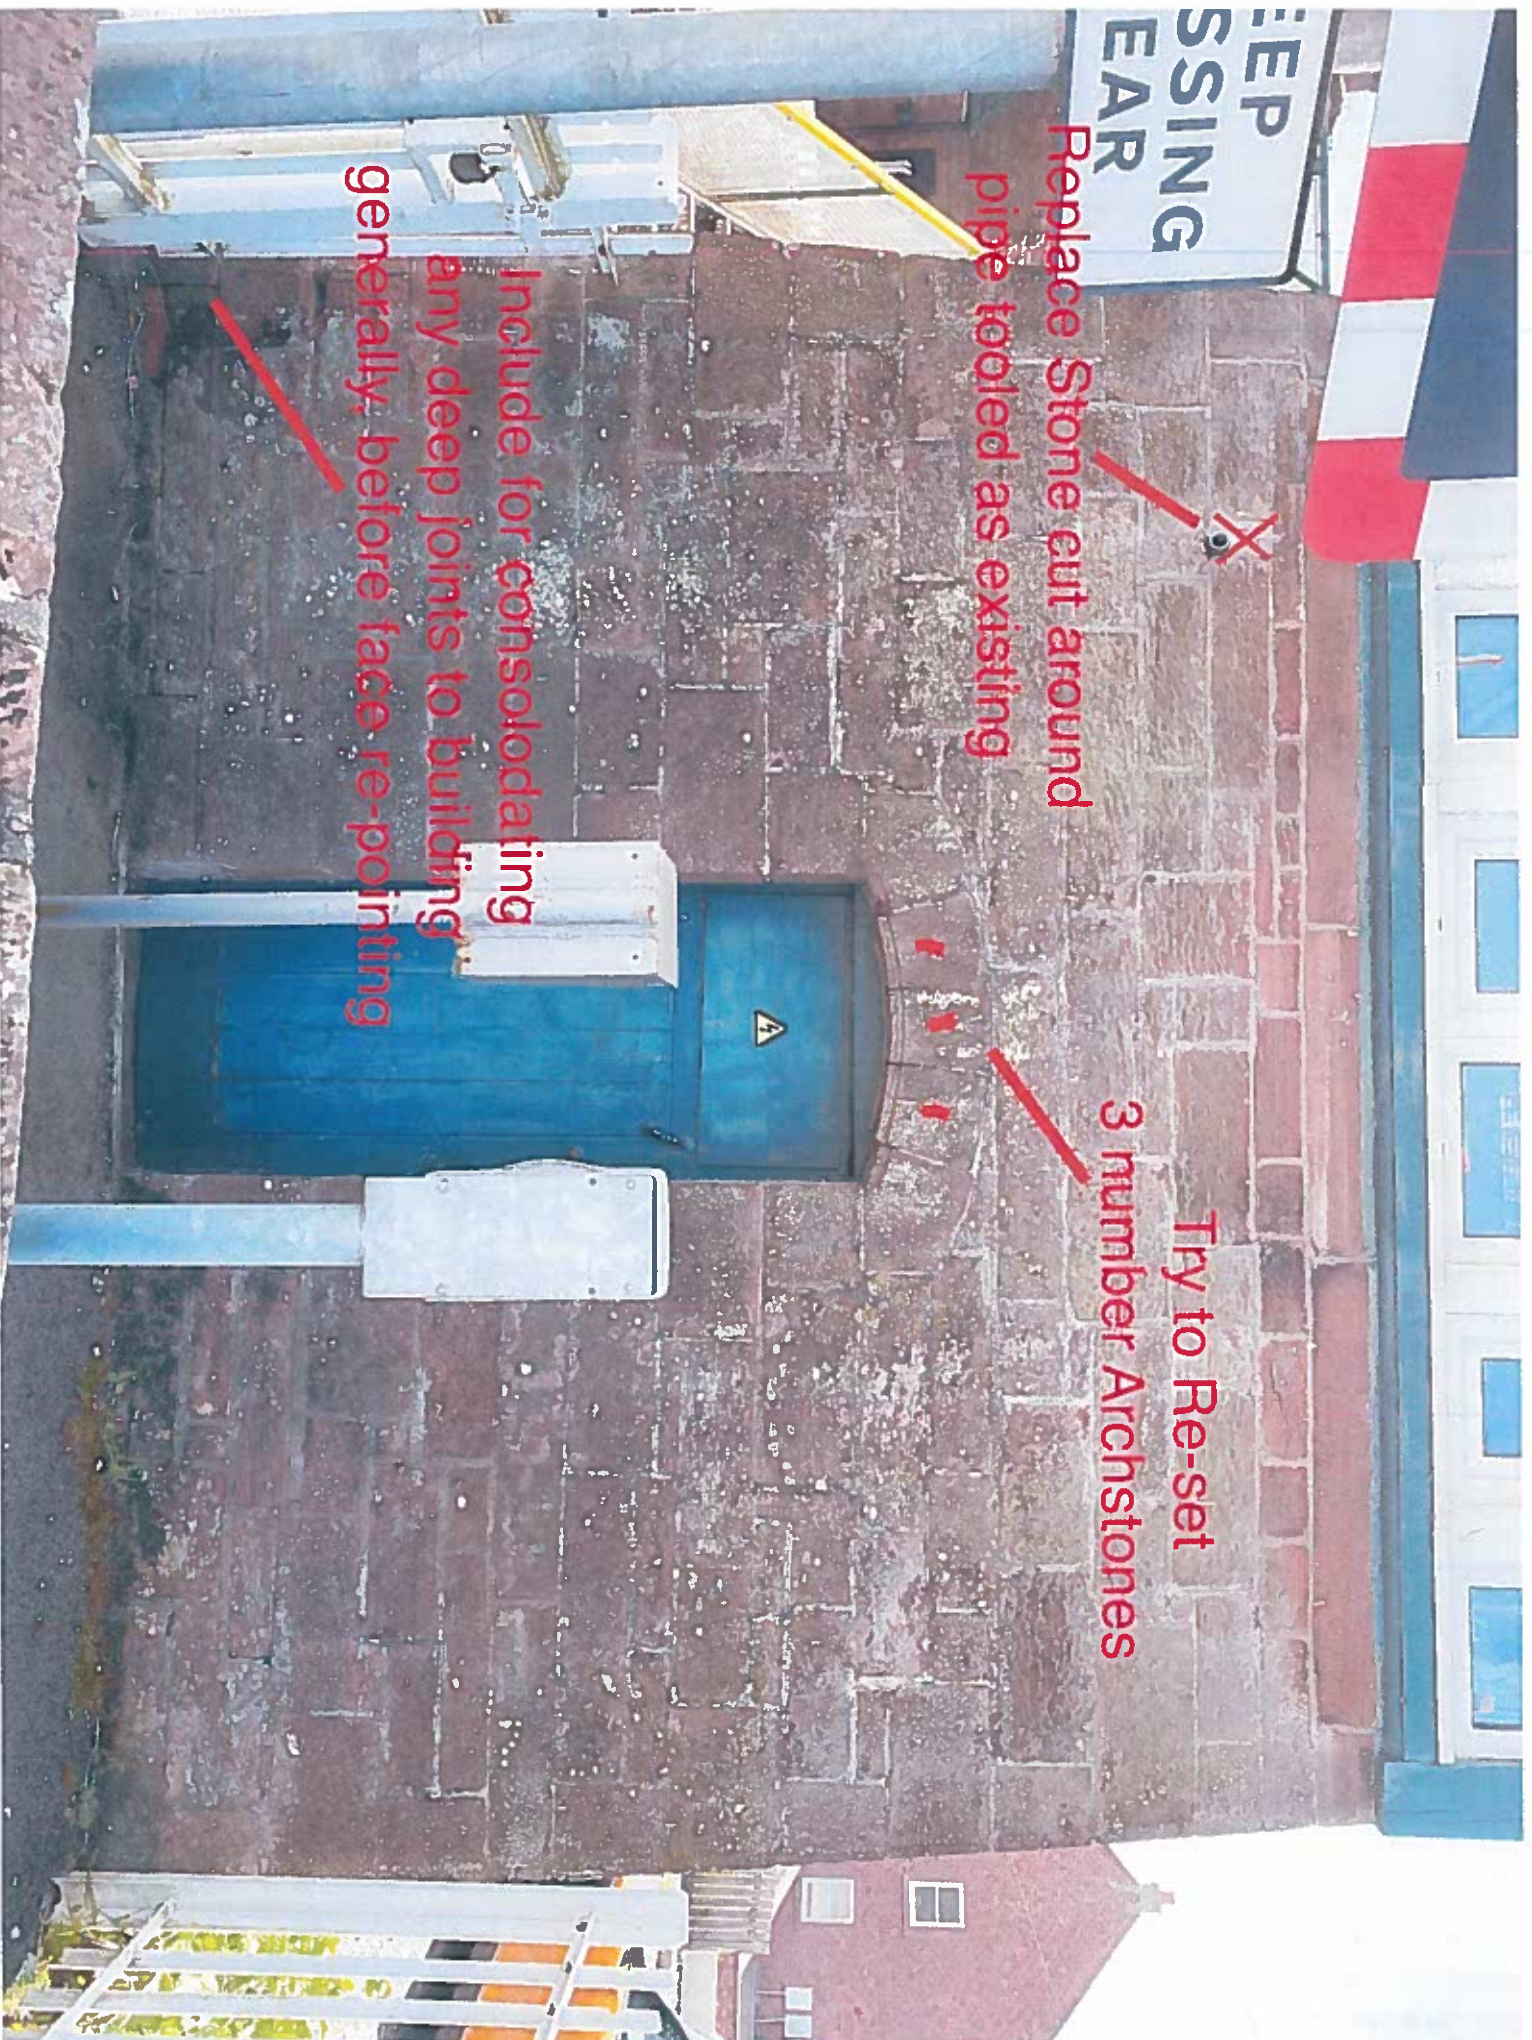

Indent Stone




De-scale
Stones as

needed to full
building

Replace 4 stones
tooled as existing



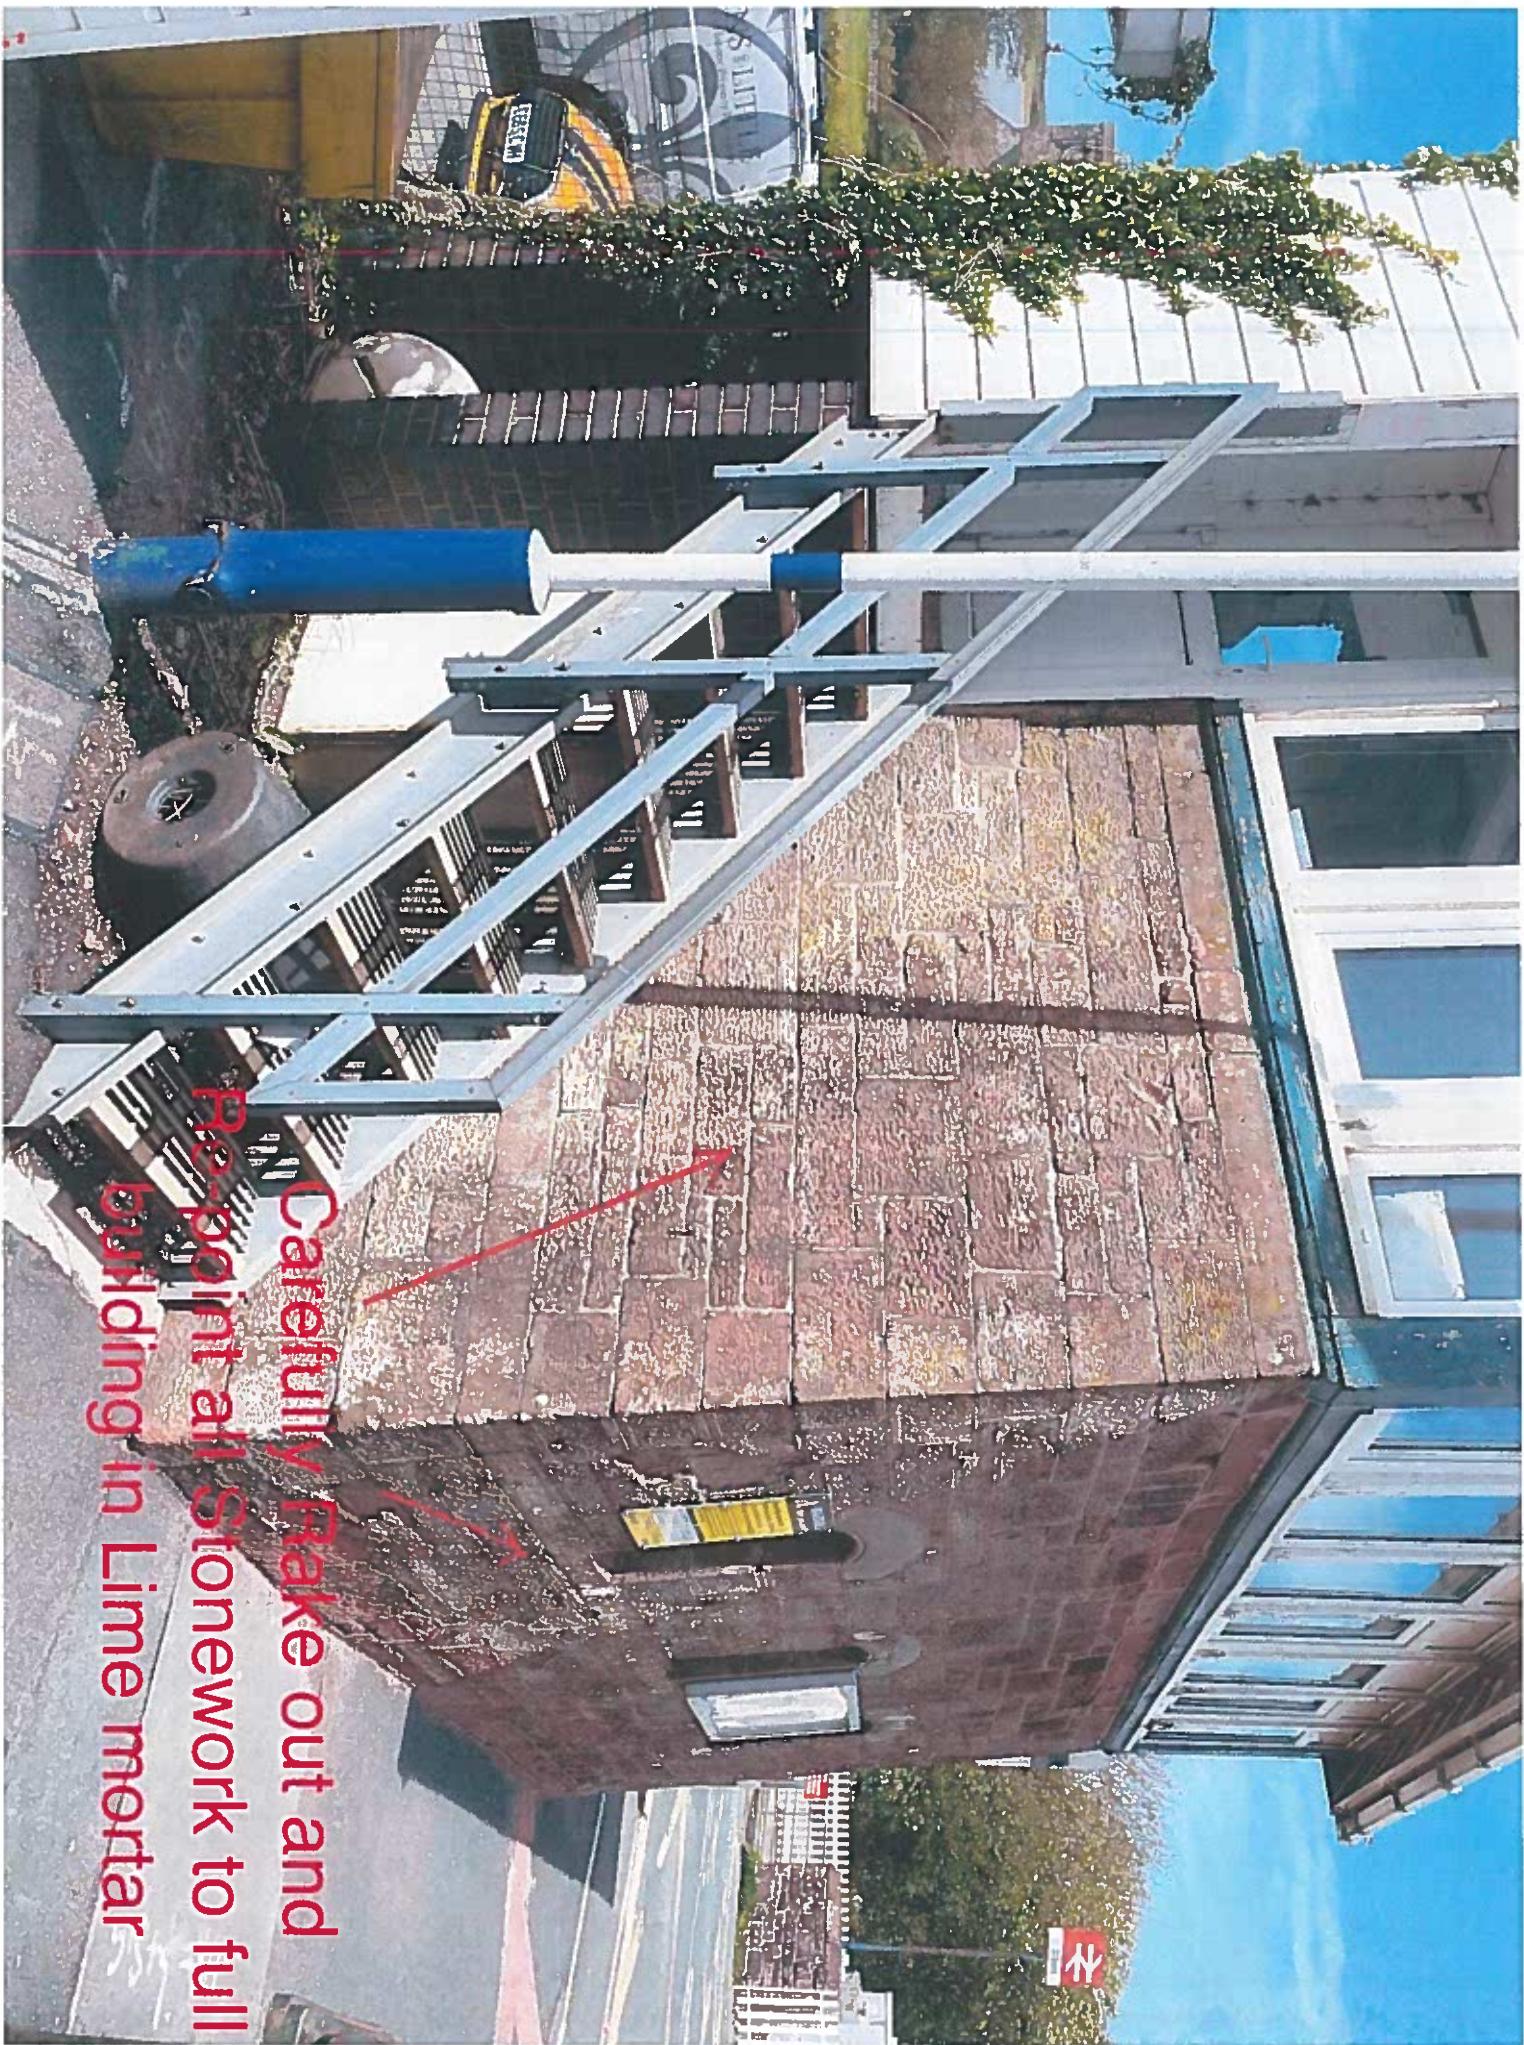

Carefully rake out and
re-point all Stonework to full
building in Lime mortar