

12 Methley Road, Castleford, WF10 1LX





# **RAMS Package – Saddle Drain Connection**

This risk assessment and method statement have been complied using industry knowledge, client information and legal guidance, regulations and customer requirements. The document is not definitive in that; it should be read at a pre-work commencement briefing and challenged. Any alterations can be made on the rear of the document, and counter signed (initials). The document should be continually reviewed at site level to ensure its validity.

Continuately reviewed at the tover to endure the variancy.											
Client	Aldi / Pro	ojekt	Cont	ract No.	ract No. HH 592 Date 09/05/2025						
Site Address	Aldi Whi	tehaven, Preston Road, CA28		Site Mai	nager						
Work Area	Site										
<b>HH Contracts Man</b>	ager	Paul Handforth		Contact	No.						
HH Site Manager				Contact	No.						

1. Programme									
Start Date	20/05/2025	Duration of Works	TBC	Working Days	Monday – Friday				
	26/05/2025 <b>Duration of W</b>	Duration of Works		Working Hours	08:00-17:30				

#### 2. Actions prior to commencing work activities

Prior to commencing work on site, all our operatives will report to the site office on their first day to receive a H&S Safety induction and sign in / out each and every time they arrive or leave the site. The site manager working with our foreman shall maintain open lines of communication to ensure that safety and quality standards are being met and to ensure the areas are segregated from other contractors to ensure the areas remain clear during the specified ground work tasks.

#### 3. Description of works

HH Construction LTD have been appointed to carry out the following work activities:

Saddle Drainage Connection to live watercourse.

## 4. Competence/Resources


HH Construction Ltd will employ sufficient numbers of ground workers or machine operators as required to enable completion of works within contract specification and times. The operatives will all hold the appropriate skills and qualifications to undertake these works:

- All plant and machinery operators will have been assessed under the CPCS and NPORS Registration Scheme and hold trained operator or competent operator cards.
- Training certificates will be available in the site file.
- Site managers hold current SMSTS & First aid
- All HH Construction employees will hold a current CSCS or CSCS Affiliated card.

5. Plant/Equipment/Tool requirements									
All plant/equipment/tools are subject to thor	ough examinations under the Provision and Us	e of Work Equipment Regulations 1998.							
Туре	Plant No.	Inspection Date							
360 Excavator (RD or Rubber Tracked)									
Road Saw									
Tripod									
Winch									
Harness									
Escape Set									
Gas Detector									



12 Methley Road, Castleford, WF10 1LX





## 6. Personal Protective Equipment (PPE) Required (Please ✓)

		• •	• •	<u>'</u>				
0							Other	Other
Hardhat BS EN 397	Hi-Vis BS EN 471-2	Footwear BS EN345-1	Gloves BS EN 388	Glasses BS EN 166 B	Hearing BS EN 352-1	Respiratory EN149 FFP3		
MANDATORY	MANDATORY	MANDATORY						

Mandatory minimum **3 points** PPE at all times. Additional PPE may be required as directed on the site-specific Risk Assessments. All PPE issued will be recorded on the issue record and where necessary, operatives will receive suitable instruction and training on its use.

# 7. Welfare requirements


Provided by Principal Contractor in compliance with Schedule 2 of the 2015 CDM regulations.

HH Construction will provide their own site cabin, plant/equipment safe as per Preamble document - HHRAMS 00.

## 8. Emergency Procedures (indicate whether provided by PC, HH or both - see 1. Sequence of works)

First aid cover and facilities will be provided by the main contractor in addition to our own trained first aider, these requirements will be communicated to the workforce during the site health and safety induction.


Emergency procedures will be designed and implemented by the main contractor; these will be communicated to the workforce during the site induction.

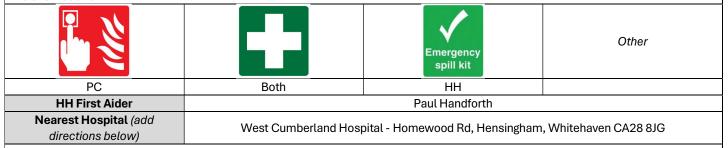


- Head south on Preston St/B5345 towards Ginns
  - O Continue to follow B5345
- Turn left onto Coach Rd/The Rise
  - o Continue to follow Coach Rd
- Turn right onto Corkickle/A5094
  - o Continue to follow A5094
- Turn right onto Hensingham Byp/A595
- At Hensingham Roundabout, take the 2nd exit onto Homewood Rd
- Turn right



12 Methley Road, Castleford, WF10 1LX






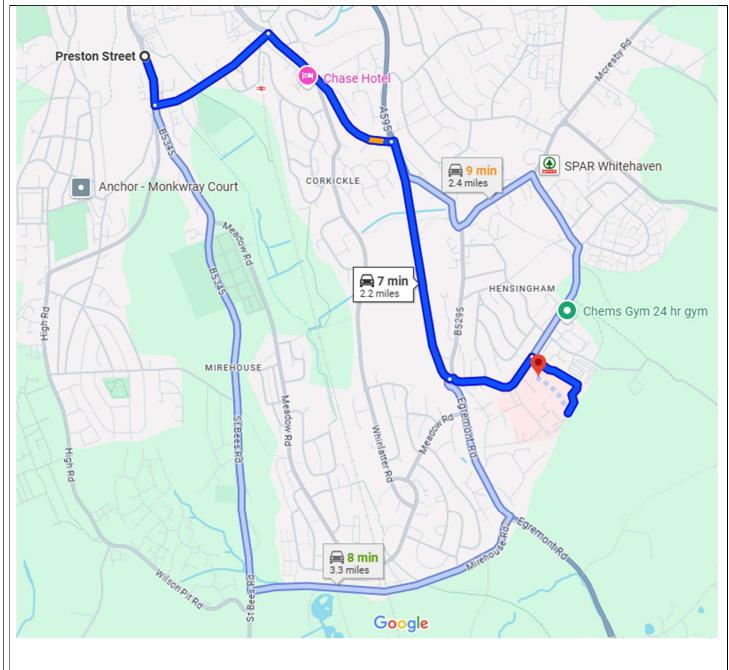



12 Methley Road, Castleford, WF10 1LX





9. Waste and en	vironmental impacts
-----------------	---------------------

Our scope of works will not have any environmental impacts. We will adhere to the Principal Contractors waste procedures and any waste will be disposed of in the designated site skips.

All materials imported and exported to site shall adhere to the WMP and ensure all information is reco

All materials	simpo	rtea ana export	tea to s	ite snati	adnere	ω	the wimp and e	ensure	au inform	atior	1181	ecoraea			
10. COSHH															
A thorough r	isk as	sessment must	be con	npleted	for all h	aza	ardous substan	ices u	nder the C	ontr	ol of	Substances	Hazard	dous to Health	1
Regulations	2002.														
Works to be	carrie	ed out are assoc	ciated w	vith the	followin	g h	azardous subs	tance	S						
Concrete		Cement		Hydrau	ulic	$\boxtimes$	Petrol		Diesel		$\boxtimes$	Grout		Tarmac	
Concrete		Cernent		Oil			1 6000		Dieset					Tarriac	
Line Marker		Grease		Aggrega	ates		Adolease		Adblue			Pipe		2-Stroke Oil	
												Lubricant			
Release		Sealant		pH Neutral			Foam		Emulsion	า		Adhesive		Bitumastic	
Agent Bituminous		Thermoplastic		neutrai	user		Construction	-				Tape		Paint	
Materials		Road Marking		P.S Mo	rtar		Dust	$\boxtimes$							
	n coni	junction with C	HH2O	Riel Ad	eeaeem	ρnt									
10 De leau l	ii coiij	direction with C	/O31111	I II JK A	33633111	CIII	. 110.								
	•	CRA 003 HYDR	RAULIC	OIL 202	25				• CF	RA 02	26 C	ONSTRUCTION	JU NC	JST 2025	
		ODA OOF DIEGE		2025											
	•	CRA 005 DIESE	L FUEL	_ 2025											
11. Permits	requi	red (Please √)													
Permit to wo	ork				Confin	ad (	Spaces				PΔr	mit to Dig			
1 Citille to We	JI K				Comm	ou .	эрассэ				1 01	Tille to Dig			
Hot-work Pe	ermit				Out-of-	-ho	urs Work				Other				
12. Tempor	arv w	orks													
		do not design ar	ny temp	orary w	orks, ar	nd v	vork underneat	h exte	ernal desig	ners	. Coi	ntact informa	tion fo	or temporary	
		the task below.	.,		· · · · · · · · · · · · · · · · · · ·					,					
TW Design									Contac	t Nu	mbe	r			
TWD Check	er								Contac						
TW Coordin									Contac						
TW Supervi									Contac						
111 Capol II	<del></del>								Contac	· · · ·		•			
13. Lifting o	nerati	ione													
	•	ns conducted by	v HH C	onstruc	tion will	he	completed in I	ine wi	th the 'Sal	hedu	le o	f Common Li	fte' \	ithin the Lifting	ว์
		- HHC-P&P02		onstruc	CIOII WILL	bc	completed in t	IIIC VVI	ur urc <b>301</b>	icuu	ite o	Common E	113 W	idilii dio Liidile	5
	,	n must also be c		tad cha	wing de	tail	e of the lift incl	ıdina l	location n	nach	inaı	sed access	oriae II	sed and mate	riale
to be lifted.	it ptai	i iliust atso be t	omple	teu silo	wing de	lait	s or the thirmon	Juling	iocation, n	ilacii	iiie c	iseu, accessi	Ji les u	Seu anu matei	iiais
	iinmo	nt is subject to	thoroug	rh ovom	vination	r	ndor the Lifting	Onoro	tions and	Liftin	or En	uinmont Dog	ulatio	ac 1000 at the	
specified int		-	uioiou	511 GXaIII	mations	ul	idei tile Liitilig	Opera	เนบแจ สแน	LIIUI	ıg ⊑U	laihiiieiir ue8	utatiUl	าร ารรงสเนาช	
specified IIII	ei vals														
• 6 m	nonths	s, for lifting equi	pment	and any	associa	ate	d accessories ι	used to	o lift peopl	le.					
• 6 m	nonths	s, for all lifting a	ccesso	ries.											

**Appointed Person** 

12 months, for all other lifting equipment.

**Contact Number** 



12 Methley Road, Castleford, WF10 1LX www.hhconstructionltd.com info@hhconstructionltd.com




#### 14. Scope of works

In order to ensure that the works are carried out in a way which minimises the risk to the safety and health of both workers and others affected by the work activities, the following measures will be implemented and followed. If at any time this sequence is no longer relevant, works must cease immediately, and the supervisor informed.

The works will then be continually assessed and where necessary suitable amendments made to the risk assessment and this method statement. Any subsequent changes made must be communicated to the workforce.

#### Order of works:

- Pre-start safety checks.
- Securing the work area.
- Operation.
- Additional Conditions.

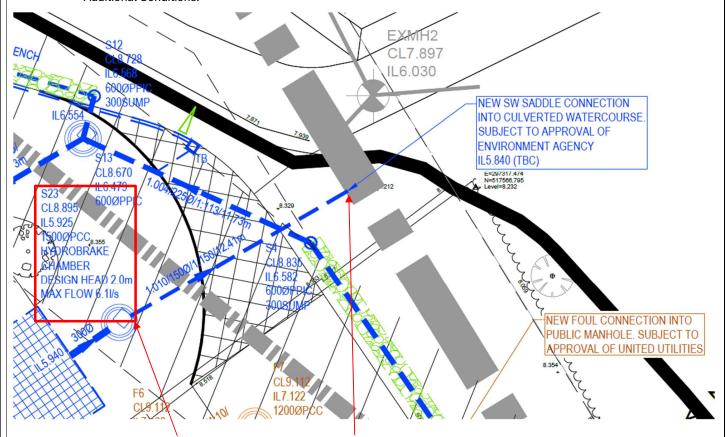

Connection to be made from S23 to existing 1700mm brick culverted watercourse.



12 Methley Road, Castleford, WF10 1LX





### 15. Roles and Responsibilities

#### 15.1 Site manager:

- Ensure the risk assessment and method statement have been communicated to those involved in the work.
- Monitor the works to ensure the risk assessment and SSW remains suitable and sufficient.
- Ensure a Pre-Start induction is given to all workers involved in the task.
- Ensure all the relevant inspection records are signed and completed.
- Ensure that all the Equipment used for the task is tested and certificates are checked.

NB: A Pre-Start Briefing must be given by the site manager prior to work commencing. The talk must cover the requirements of this Method Statement, and site hazards or work restrictions for the day and any other relevant instructions.

#### 15.2 Site Operatives:

- Ensuring they take reasonable care of their own safety, and or any other person(s), who may be affected by their acts or
  omissions at work.
- Not misusing or interfering with anything provided with regard to safety, health, welfare, and fire arrangements.
   (Employees misusing personal protective equipment will be subject to disciplinary action by the Company). Ensuring they use and/or wear PPE as instructed.
- Looking after and maintaining equipment issued and requesting replacements when necessary.
- Complying strictly to all site rules and safe working procedures and only operate plant and equipment for which they are trained.
- Using the correct tools and equipment for the task, reporting defective equipment.
- Follow the safety systems of work detailed in any risk assessment or method statement.
- Report all accidents / incidents to the appropriate persons.
- Comply with both the company rules and any client site rules.



12 Methley Road, Castleford, WF10 1LX www.hhconstructionltd.com info@hhconstructionltd.com



### 16. Methodology

#### 16.1 Pre-Start checks

Prior to any work commencing, pre-use inspections must be taken and recorded to ensure the equipment is safe for use and fit for purpose. All equipment must be used for their intended purposes.

#### 16.2 Securing the work area

- Access and egress points will be agreed with the client prior to work commencing. General restrictions apply with access for all deliveries including plant and materials, i.e., not blocking existing driveways or access points, not parking on side streets or restricted roads and use of banksman as required to ensure safe access/egress.
- Normal access to the site will be as directed by the Site Manager or Client.
- Interlocked pedestrian barriers will be used to secure the work area will be made secure in order to prevent the entry of unauthorised personnel.
- Pedestrians are to be segregated from the works area using suitable, barriers, fencing, signage, and cones as required.
- All personnel are to report to the site office, sign in daily.

#### 16.3 Service location

Services will be located observing the following points:

#### 16.3.1 Pre-Use Inspections of Cable Detecting Equipment

- All Cable Detecting Equipment (CAT) must have an up-to date Calibration Certificate; this must be checked by the Site Manager before the CAT is used. Where possible a Genny will be used with the CAT in order to locate any services more accurately.
- The CAT (and Genny) must be inspected for signs of damage or defect, any issues must be recorded on the "Small Tools Register" and the equipment not used, it must be sent away for repair and re-calibration.

#### 16.3.2 Identifying the location of a Service

- Where a service is suspected or identified, then the positions of these will be marked using spray paint, barriers, road-cones or similar which will identify the route of the service, this will provide a visual aid for all persons on site as to the location of the services.
- A safety zone of at least 5m away from any detected services will be marked out in an appropriate manner. See **16.4.1 Excavation Safety** for further measures.

#### 16.3.3 CAT and Genny method

- When scanning the area with the CAT the user should walk the whole area in a "grid" pattern this will ensure that the whole area is checked. Where a Service is identified the sensitivity control should be turned so that it narrows the area of detection which will help to pin-point the exact location of the Service.
- The Genny should be attached to the service if a connection point can be found, with the Genny turned on this will send a
  repeating signal through the service which can then be detected by the CAT.
- If a connection point cannot be found then the Genny should be placed directly over the service and turned on this will send a signal through the ground which may then be picked up by the service which in turn will then transmit a signal.



12 Methley Road, Castleford, WF10 1LX www.hhconstructionltd.com info@hhconstructionltd.com



#### 16.4 Excavation works

#### 16.4.1 Excavation safety

- Where practicable, the use of a Vac-Ex must be used over any mechanical digging aids. RAMS for use of Vac-Ex will be
  provided separately or by the sub-contractor. The use of an air or water lance may be implemented to aid in disrupting earth.
- Excavation works using the 360° excavator shall only commence once the area has been scanned with cable detecting equipment and the use of a Vac-Ex has been carried out to locate any known or suspected buried services. Where services are found and revealed, then mechanical equipment will not be used within 500mm of a service.
- Once the excavator has excavated to 500m above/aside known services, the use of a Vac-Ex should be implemented to fully
  expose services. Hand digging around known services can only be completed once authorisation has been received from HH
  Health & Safety Manager or HH Construction Manager.
- Whilst the ground is being removed a banksman must be present in order to guide the excavator operator and to observe the dig looking out for services and obstructions.

#### NB: See Safe Digging Practices flowchart below for further information.

- An on-site assessment of the ground conditions and the depth is required of the excavation to determine whether it is necessary to have to use any kind of ground support.
- Ground support will be in the form of stepping back the excavation (1m back for every 1m in depth), or trench support systems to ensure that the excavation remains stable and safe for operatives working in and around.
- Steel Pedestrian Barriers will be used for edge protection these will be placed a minimum of 2mtrs from the excavation edge, where practical. If an excavation is to be left exposed overnight, double clipped heras fencing must be installed.

#### 16.4.1.1 Permit to Dig

All works must be carried out in accordance with the Principal Contractors permit to dig procedure.

- Relevant service drawings must be issued prior to works commencing; these drawings must be reviewed, and the site surveyed in order to identify the positions of any services which may be present, i.e. the location of any structures such as joint boxes and valve chambers can be verified visually.
- Underground services such as pipes, cables, ducts etc., must be located using a CAT and Genny prior to excavation commencing.

## 16.4.2 Access to excavations

- Where practical Stepsafe systems are to be used or steps will be cut into the excavation side to allow safe access and egress, where this method cannot be adopted safely then a ladder will be used.
- Where a ladder is used the following requirements must be implemented:
  - i. The ladder must be of a sufficient length so that it protrudes past the landing by at least 1mtr
  - ii. It must be set at the correct angle (1 in 4 or 75degrees)
  - iii. It must be inspected daily and a record of the inspection made weekly
  - iv. It must be secured at both the top and bottom to prevent any movement
  - v. It must be placed on firm level ground
  - vi. It must not be used by workers carrying tools, materials or equipment
  - vii. Workers must have at least three points of contact at all times
  - viii. It must be placed sideways onto the landing point so that workers do not have to stride over it to access the landing.

# Ols Michon

# HH CONSTRUCTION (GROUNDWORK CONTRACTORS) LIMITED

12 Methley Road, Castleford, WF10 1LX
www.hhconstructionltd.com info@hhconstructionltd.com



## 16.5 Use of mobile plant

- Excavation and transportation of bulk material will be undertaken using a combination of hand digging (near services), 360° excavator and dumper for material transportation.
- Appropriate safety measures (such as the use of barriers) will alert plant operators to the presence of excavations and help to prevent plant from running too close to them.
- The following controls must be implemented when using mobile plant:

#### 16.5.1 Pre-use plant inspections

- Both the Dumper and Excavator must be subject to a pre-use inspection, to check for signs of damage or defects such as:
  - Inoperative brakes
  - Punctures
  - Hydraulic leaks
  - Broken mirrors / glass
  - Defective levers
  - Defective steering
  - Material failure
- This list is not exhaustive, and each item of plant may have additional items to check. The "Daily Plant Inspection Form" contains a list of items to check, this must be completed and signed on a daily basis by the plant operator.
- Any defects are to be reported immediately to the Site Supervisor and the item concerned not used until a suitable repair has been carried out.
- Windows, Mirrors & Reversing Cameras must be adjusted to suit the operator so that all-round visibility is achieved and cleaned regularly in order to prevent a build-up of dirt and to give suitable visibility.

#### 16.5.2 Transporting the spoil / material

- The dumper driver must also ensure that he dismounts from the dumper and stands clear of the area when loading is taking place as there is a risk that he could be struck by the excavator or any spoil as it is loaded.
- When the dumper driver is travelling across site the speed of the dumper must be kept to a minimum at all times.
- Once the dumper is loaded the dumper driver must ensure that the seat belt is worn and that the flashing beacon is operating, the speed of the dumper must be kept to a minimum at all times and the driver must be constantly checking his surroundings.
- The excavator operator must also constantly check his surroundings and must not track the excavator until he has slewed the excavator so that he can check his surroundings for workers and /or other plant.
- When loading directly into a wagon the wagon must be banked to the designated loading area and the driver must stay in the cab, the 360 operator will excavate the area and load into the back of the wagon. Once loaded the wagon will be directly safely from site.

#### 16.5.3 Loading the spoil onto the dumper or wagon

• As the ground is excavated the spoil will be placed into the dumper or wagon until it is fully loaded, it should not be loaded to the extent that spoil is falling out of the skip as it is transported, this could result in workers or a member of the public being struck by falling material.



12 Methley Road, Castleford, WF10 1LX www.hhconstructionltd.com info@hhconstructionltd.com



• During loading, the dumper driver must dismount the dumper and stand clear of the loading area, i.e. in a safe position. The excavator operator also has a responsibility not to load the dumper until the driver has dismounted and stood in a safe area.

#### 16.5.4 Changing excavator attachments

- When any attachments are changed on the excavator the quick hitch pin must be available and secured in place using the safety clip to prevent it from becoming detached.
- It is the excavator operator's responsibility to ensure the safety pin is in place & secured.
- Checking the quick hitch device must be part of the pre-use inspections and should be regularly maintained to ensure correct
  working, any defect must be reported immediately. The excavator should not be used until a suitable repair has been carried
  out, a "Thorough Examination" of the quick hitch must then be undertaken and a certificate issued before it is used.

#### 16.1 Saddle Installation

#### 16.1.1 Breaking into the Drain

- The existing pipe will be exposed during excavation for the saddle installation. The existing drain will then be broken into by cutting a section away using a Stihl saw of using a core drill, stoppers will then be installed in either side of the pipe to also prevent any residual gasses displacing the air in the excavation.
- During the breaking in operation, all the correct confined space equipment (harness, tripod, gas detector etc.) and PPE (gloves, glasses, overalls etc.) will be used and worn at all times.

#### 16.1.2 Benching and surround

The saddle will be benched using mortar.

- In order to make the connection, a saddle-junction will be formed for the new drain to the existing drain.
- During the installation the correct PPE (eye protection, PVC gloves, over-trousers etc.) will be worn by operatives to ensure that they have reduced the risk of chemical burns that is present from working with mortar.
- Any contaminated clothing will be removed immediately.
- Any area of skin that is exposed to wet concrete will be washed immediately.

## 16.2 Backfilling

- Once the connection has been made and the specified bedding applied, backfill material shall then be placed in the excavation to the specified level.
- The backfill material will be compacted using a suitable compaction plate. Due to the high levels of noise and vibration generated by the compaction plate, its use should be alternated between workers to reduce personal exposure. Users must ensure that they wear the correct PPE i.e. gloves, ear defenders. The hands should be kept warm and dry at all times and each person who is to use the plate should read, understand and comply with the relevant HAV assessment.

#### 16.3 Additional conditions

## 16.3.1 Danger to operatives on site.

All personnel on site will be aware of the dangers of working close to heavy plant and with hot bituminous materials and will
wear the appropriate PPE, i.e.: safety footwear, gloves (heat resistant), high visibility clothing, goggles and hard hats as
required.

# Q<sub>ISTRICTION</sub>

## HH CONSTRUCTION (GROUNDWORK CONTRACTORS) LIMITED

12 Methley Road, Castleford, WF10 1LX www.hhconstructionltd.com info@hhconstructionltd.com



- Only competent trained persons will operate the plant and equipment required.
- Footplates/cover plates will be kept clean and clear of materials at all times.
- Operators of the machine will be reminded of the dangers of walking on metal surfaces and will be particularly cautious when the surfaces are wet.
- All personnel will be made aware of hot surfaces on the machine and will be wearing Heat Resistant gloves and footwear when appropriate.
- Personnel operating machinery will remain within isolated areas, clear of site traffic.
- All personnel must keep clear of moving parts, e.g.: augers, tampers and flight bars conveyor systems and rollers.
- When marshalling the lorry into position banksman must stand at the side of the plant and away from the direction of the
  vehicle
- The driver of the plant will position according to relevant site line for a better all-round observation.
- Fire extinguishers will be kept on the machine at all times.
- Gas bottles for the plant will be kept in a safe place stored as per the requirements of the Dangerous Substances Regulations.

#### 16.3.2 Danger to Pedestrians, Public and Children where applicable.

- Ensure no pedestrians or unauthorised personnel enter the area around the plant or operations.
- Ensure adequate guarding and signage is in place prior to commencement of operations and continue to monitor during day.
- If unauthorised access is gained, end all operations promptly and report to supervisor/manager immediately to enable the situation to be handled affectively.

## 16.3.3 Working with vibrating plant/equipment

- When using vibrating equipment, operatives will ensure that they have understood the relevant HAVS assessment for the plant to be used.
- The HAVS assessment will detail what the maximum amount of time that an operative can use a certain item of equipment before the exposure limits are reached.
- In order to minimise the effects of vibration, operatives will ensure that they alternate the use of the vibrating equipment between themselves to make sure that no one individual is exposed to excessive levels of vibration.
- The HAVS assessment will also detail the appropriate PPE that must be worn when using the item of plant/equipment (e.g., heavy gloves, safety boots etc.) and also the correct operational procedures that should be followed (e.g. taking frequent breaks and not smoking as it affects blood circulation, increasing the risk of suffering from the effects of vibration etc.).

#### 16.3.4 Construction dust


Silica dust will be generated when working in construction, specifically respirable crystalline silica (RCS). This is a fine dust generated from materials like rock, sand, and concrete, and can pose serious health risks if inhaled. Prolonged exposure can lead to silicosis, a lung disease, and potentially increase the risk of lung cancer and other respiratory illnesses.

- Assessment of workload to determine those activities that may generate dust/Fume
- COSHH data sheets checked for those materials producing dust and fumes, any toxic material identified followed by an assessment to establish, who is exposed, what the exposure risk is and where the work shall be completed.
- Dust emissions to be minimised and/or contained to boundaries of the construction site, e.g. re-specifying work to eliminate or reduce dust hazards by either:
  - o Dampening work before or during mixing and any sanding down of floor areas.
  - o Dust suppression to be used on equipment where possible.

# Q<sub>ISTRICTION</sub>

# HH CONSTRUCTION (GROUNDWORK CONTRACTORS) LIMITED

12 Methley Road, Castleford, WF10 1LX






•	All disposable dust masks to be FFP3 type (minimum)
•	All operatives wearing or having the need to wear disposable masks must be face fit tested.



12 Methley Road, Castleford, WF10 1LX www.hhconstructionltd.com info@hhconstructionltd.com



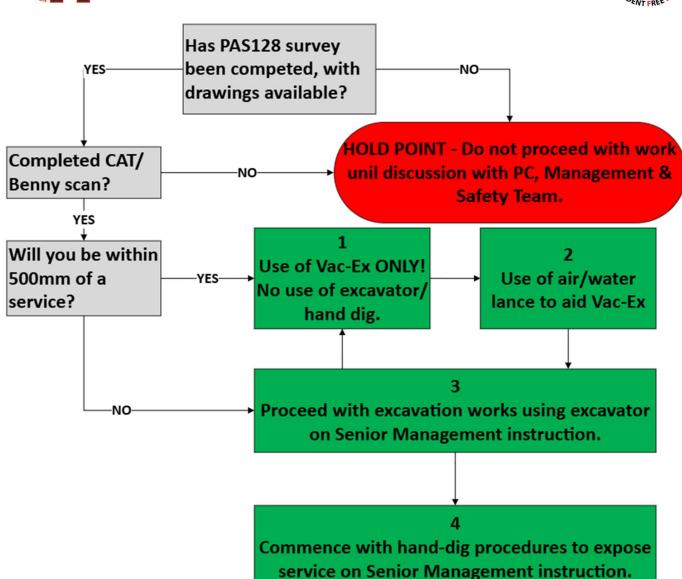



**MANDATORY** 

**MANDATORY** 

Severity

# HH CONSTRUCTION (GROUNDWORK CONTRACTORS) LIMITED

12 Methley Road, Castleford, WF10 1LX

www.hhconstructionltd.com info@hhconstructionltd.com



Nature of Work	Saddle drain connection	ddle drain connection Ref						Contract No.	HH592
Client/Address	Aldi/Projekt - Aldi Whitehaver	/Projekt - Aldi Whitehaven, Preston Road, CA28							ing, then in changes.
Contract Manager	Paul Handforth		Contact Nur	nber					
Site Manager									
Persons at Risk	Employed ✓	Clients Employe	ees ✓	Membe	ers of Public		Vulnerable P	ersons	

Person	nal Protective	e Equipment (PPE	E) <b>Required</b> (Please√)						
								Other	Other
Hai BS E	rdhat	Hi-Vis	Footwear	Gloves	Glasses	Hearing	Respiratory		

## Likelihood

**MANDATORY** 

		not possible	remote	possible	probable	inevitable
		1	2	3	4	5
superficial	1	1	2	3	4	5
minor	2	2	4	6	8	10
moderate	3	3	6	9	12	15
major	4	4	8	12	16	20
fatal	5	5	10	15	20	25

Low Risk	Tolerable Level
Medium Risk	Frequent Monitoring Required
High Risk	Unacceptable – Further Measures Required



12 Methley Road, Castleford, WF10 1LX



Hazards	Those at risk	Risk Ratii Cont	_	Control Measures	Risk Rat Cont	_
		Likelihood	Severity		Likelihood	Severity
Unauthorised personnel. Unplanned interaction with the operations.	Operatives Unauthorised personnel	orised 25		<ul> <li>Prevent access using gated access, which is to be closed once established on site and used to control access/egress.</li> <li>PC to ensure site boundary remains secure under Reg 18 Of the Construction Design &amp; Management Regulations 2015.</li> </ul>	1 5 5	
Operating plant	All site personal	3	5	<ul> <li>Plant operators must be trained to national plant standards (CPCS/NPORS).</li> <li>They must ensure that they constantly check their surroundings and ensure that the plant they are using has been inspected and is safe for use.</li> <li>The speed of dumpers must be kept to a minimum at all times and any site speed limits adhered to, this can be achieved by keeping the dumper in one gear as opposed to using all gears.</li> <li>The dumper driver must wear a seatbelt at ALL times.</li> <li>The dumper driver must dismount and stand in a safe area before the dumper is loaded.</li> <li>Bungee cords must be used at all times ensuring that the cord is attached to the key and the driver, keys must never be left in plant when unattended.</li> </ul>	1	5



12 Methley Road, Castleford, WF10 1LX



		3	•	Plant operators must be trained to national plant standards (CPCS/NPORS).	1	5
			•	They must ensure that they constantly check their surroundings and ensure that the plant they are using has been inspected and is safe for use.		
			•	The speed must be kept to a minimum at all times and any site speed limits adhered to, this can be achieved by keeping machine at low revs/gears.		
		Keys must never be left in plant when unattended.		Keys must never be left in plant when unattended.		
Use of Excavator striking other machinery, structures or individuals.	All site personal.	15	•	All operatives to adhere to machine exclusion zones and ensure not to encroach within a machines working radius. Minimum 3mtr exclusion zone.		5
			•	Ensure that all hand signals are agreed, with reference to BS7121, before operations commence.		
			•	Implement use of radio communications where practicable, keeping marshal away from immediate area.		
			•	Keep minimum of 500mm clearance between machine and any structure.		
			•	Implement visible barriers between machine route and any structure as a visual aid for operator.		
		3	•	The cab must be positioned so that it is parallel with the excavators tracks	3	2
Gaining access to and egress from the excavator cab.	Machine operative.	9	•	The dedicated handrails and footsteps must be used and must be kept clear of debris, mud and other loose material		6
	•		•	The person must enter and leave the cab facing towards the cab (never have your back towards the cab).		



12 Methley Road, Castleford, WF10 1LX



Buried Services when	Those	4	5	•	A permit to dig must be issued by the main contractor before works	1	5
carrying out excavation works.	carrying out the works				commence. All those involved in the works must be present when the PTD is issued and sign the permit		
				٠	A pre-Use Inspection of Cable Detecting Equipment must be carried out in order to check for any damage or defect, any found should be reported to the site supervisor and the item not used until and a replacement issued.		
				٠	Cable Detecting Equipment must have an up-to-date Calibration Certificate which should be checked before use, the CAT should also be checked on a live service to ensure it works correctly		
				٠	Picks, Wrecking Bars etc must NOT be used when Hand Digging, only Shovels or Grafts are to be used, these must have insulated handles.		
		20		٠	Service Drawings must be obtained when the permit to dig is issued, these should be used only as a guide and not reliable upon as accurate information		5
				٠	Cable Detecting Equipment must only be used by competent persons. If in doubt as to how the equipment works ASK!		
				٠	Where necessary the Service provider must be contacted, and the service disconnected if possible		
				٠	Hand Digging must be carried out with care (always dig as though a Service is there)		
				٠	Scanning must be carried out regularly as the excavation works take place whether it is hand digging or mechanical digging		



12 Methley Road, Castleford, WF10 1LX



		5	5	•	Operators should be aware of their surroundings and should familiarise themselves with the site.	1		5
<b>Excavations</b> Plant falling into excavations; trapping or	Operative. Persons in			•	Operators should be aware of any excavations occurring in their areas.  Where necessary, stop blocks and barriers shall be used to guard the edges of excavations.			
crushing – potential for damage to plant or serious injury or death.	immediate area.	25		•	Ensure excavation barriers are implemented 2mtr away from the edge of the excavation:  Steel pedestrian barriers 0 working hours.  Double clipped heras fencing – evenings/overnight.  Where excavations are open on highways or traffic/pedestrian routes, steel crossing plates rated for the right weight must be used.		5	
Lifting operations Failure of lifting equipment or accessories	Persons in the work area	3	5	•	All lifting equipment and accessories MUST be inspected before use each time.  There MUST be a valid examination certificate for each item this MUST be checked by the site supervisor before the item is used.  Any damage or defect found on any item MUST be recorded and withdrawn from service until repaired or disposed of	1	5	5



12 Methley Road, Castleford, WF10 1LX



Vibration	Operator	5	4	<ul> <li>A HAV assessment will be compiled for all Tools &amp; Equipment which produces Vibration levels above the EAV 2.5m/s2</li> </ul>	2 4
Operating Tools and Equipment which emits Vibration				Any person suffering from any affects related to HAVS must report this to their supervisor. That person will then be given tasks which do not involve the use of Vibrating Tools / Equipment	
				All workers must read the relevant HAV assessment for the Tool Equipment they are to use.	
		20	)	They must ensure that the ELV 5.0m/s2 is not exceeded within a 8hour period	8
				The Site Supervisor will monitor exposure levels for each worker compile a daily record of exposure.	
				The Hands must be dry and warmed before using any vibrating Tools / Equipment, Gloves must be worn at all times in order to keep the Hands warm as this helps circulation.	
				<ul> <li>Regular breaks must be taken in order to keep the Hands warm and to enable a good Blood circulation to be maintained.</li> </ul>	
Noise	Those within the work area	5	4	Ear defenders must be worn by all those within the work area who are affected by the noise	2 4
	Workdrou	20		The wearer must ensure that the defenders are inspected before use and that any damaged items are not worn	8
				The defenders must also be fitted correctly to ensure adequate hearing protection is achieved	



12 Methley Road, Castleford, WF10 1LX



Manual Handling of various equipment on site.	Those carrying out the work	20	4	<ul> <li>Wherever possible mechanical equipment should be used to place the materials as close to the work area as possible to reduce the carrying distances</li> <li>Where materials are lifted manually then this should be number with more than one person in order to reduce the weight of the load carried by each person</li> <li>A good lifting technique should be adopted i.e. keep the back straight, bend the knees, take a firm grip and use the leg muscles to lift the load</li> <li>Gloves should be worn at all times to protect the hands from splinters, cuts, and abrasions</li> </ul>	1	4 I
Dust. Inhalation of hazardous airborne particles.	Operatives Others in immediate area	20	4	<ul> <li>Ensure operatives are face fit tested and wearing appropriate R.P.E if dust cannot be controlled by other means.</li> <li>Prevent dust from entering cabbed machines by closing windows/doors and using maintained HVAC system.</li> <li>Dampen down ground where practicable, ensuring dust cannot be kicked up in initial instance.</li> </ul>	2	4
Use of stihl saw	User/Those in the immediate area	16	4	<ul> <li>Ensure work piece held securely.</li> <li>Ensure saw is in good condition and the blade has been fitted correctly. (Check as part of the pre-use checks).</li> <li>Ensure user maintains a controlled action and keeps other hand protected and out of way where possible.</li> <li>Ensure that adequate dust suppression methods are employed.</li> <li>Ensure that an exclusion zone is appropriately set out.</li> <li>User to ensure that all in the immediate area are donning the correct PPE/RPE.</li> </ul>	1	4



12 Methley Road, Castleford, WF10 1LX



Potential for fire/explosions from vapours within drainage systems.  • Any contaminated soil or spillage containment material (granules, sand, absorbents etc.) must be treated as hazardous waste and should be disposed of in accordance with the environmental procedures set out by the principal contractor and the local and national regulations.  • In the event that any fuel enters the drainage system, or any water courses, then appropriate authorities (Environment Agency, local authority, water company etc.) must be informed immediately.  • The principal contractor will designate refuelling area on site. This will be surrounded by the appropriate barriers.  • A small bunded area should be formed in front of the fuel tanks to contain any drips or spills from the nozzles of the tank hoses. If this is not possible, then a drip tray should be set up in front of the tank.	from vapours within	All those on site.  The environment.	20	<ul> <li>absorbents etc.) must be treated as hazardous waste and should be disposed of in accordance with the environmental procedures set out by the principal contractor and the local and national regulations.</li> <li>In the event that any fuel enters the drainage system, or any water courses, then appropriate authorities (Environment Agency, local authority, water company etc.) must be informed immediately.</li> <li>The principal contractor will designate refuelling area on site. This will be surrounded by the appropriate barriers.</li> <li>A small bunded area should be formed in front of the fuel tanks to contain any drips or spills from the nozzles of the tank hoses. If this is not possible,</li> </ul>	<b>1</b> 5
---	---------------------	--------------------------------------	----	--	------------



12 Methley Road, Castleford, WF10 1LX www.hhconstructionltd.com info@hhconstructionltd.com



THIS RISK ASSESSMENT WAS PREPARED BY							
Name	Position	Signature	Date				
Alex Craig CertIOSH MIRSM	H&S Manager		09/05/2025				

#### MANAGER / SUPERVISOR INCHARGE OF WORKS

I confirm that I have read and understand the requirements of this method statement and associated risk assessments (as highlighted on first page) and have communicated them to operatives under my control and to others who may be affected by its requirements.

Note: it is important that you test the operatives' understanding and confirm that they have read and understood the method statement and risk assessments.

Name	Position	Signature	Date

#### **OPERATIVES/WORKFORCE UNDERTAKING WORKS**

I understand and will agree to adhere to the contents of this method statement and the associated risk assessments (as highlighted by the supervisor). I have attended a site induction/briefing that explained the general site rules and necessary site-specific arrangements.

Note: if you have any doubt about information given or contained in this method statement, ask for clarification.

Name	Position	Signature	Date